

Short Instruction for the „Update Software,,

1. Installation

Copy the update software(Update.exe) into a directory of your choice.
(It is an selfextracting file, which decompress itself)

2. Start of the programm

open the Windows-Explorer

open the directory with the update software

double klick the .exe - file.

3. update aquastar: connect the aquastar via the PC-Cable to the PC

remove the powersupply from the aquastar

click on "SendFile" at the PC-Software

select the *hex - file (e.g. aq214_EN.hex) in the next dialogue

select the serial interface (COM1, COM2) in the next dialogue

wait, until you see "Verbindungsaufnahme"

connect the powersupply to the aquastar

then you will see how the several sectors are written to the aquastar

wait 1 til 2 minutes

4. update is complete